



USB Digital Signage Display

User Manual

For Model: NC-A24D-24D-26

Ver. 2026 September

 
Usage Notes

- This product automatically plays files located in the root directory of the storage device (such as a USB drive or SD card). To play files within a subdirectory, use the remote control to select them manually.
- This product supports sorting file names by numbers and letters, but does not support sorting by Chinese characters. The sort order is as follows: numbers are sorted first, followed by letters — numbers from 0 to 9, then letters from uppercase A–Z to lowercase a–z.
- To play files with Chinese file names in a specific order, add a number or letter before the Chinese file name when saving, e.g. "100 Chinese.avi" or "A Chinese.mpg".


	USB Flash Drive Format	FAT32
Supported Formats	Video	RM / RMVB / AVI / MPG / MPEG / FLV / VOB / MP4 / MKV (Max 1920X1080 25MBps)
	Image	JPEG 、 PNG
	Audio	MP3
Video Decoding Support	Maximum Resolution	1920 X 1080 @60Hz
	Maximum Color Depth	24bit
	Maximum Frame Rate	30fps
	Maximum Bitrate	USB2.0 device: 20Mbit/sec
Audio Decoding Support	Sample Rate	30kHz 、 44.1kHz 、 48kHz 、 96kHz
	Bit Rate	32kbps ~ 448kbps

About Remote Controller



	Mute		Rewind
	Switch signal: HDMP/DMP (USB)		Fast Forward
	Power ON/OFF		Previous Track
	Switch Modes: Photo/Music/Video		Next Track
	Play/Pause		Enter
	Exit		Navigation
	Menu Setup		Calendar/Playback Control
	Volume + / Volume -		

 
Product Interfaces: HDMI / SD / USB / LINE Out / Power ON/OFF / DC Power Port

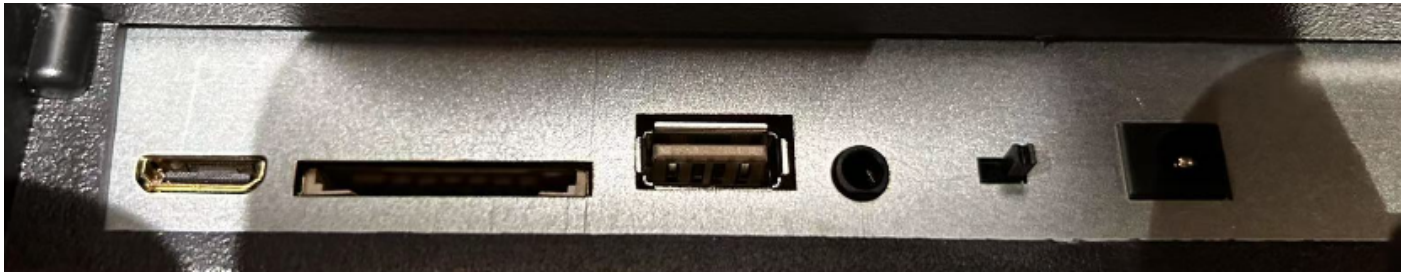

Click on the Switch signal button on remote controller to choose whether the signal come from HDMI or DMP (USB drive or SD card).



 
About OSD Menu

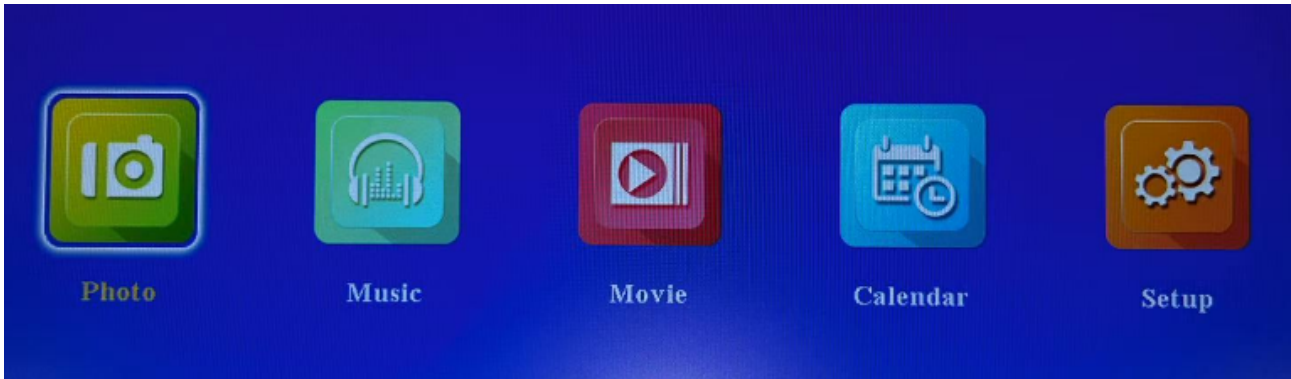


- [Photo] or [Music] or [Movie], then choose the signal (USB drive or SD card)



 - Calendar: show the date and time

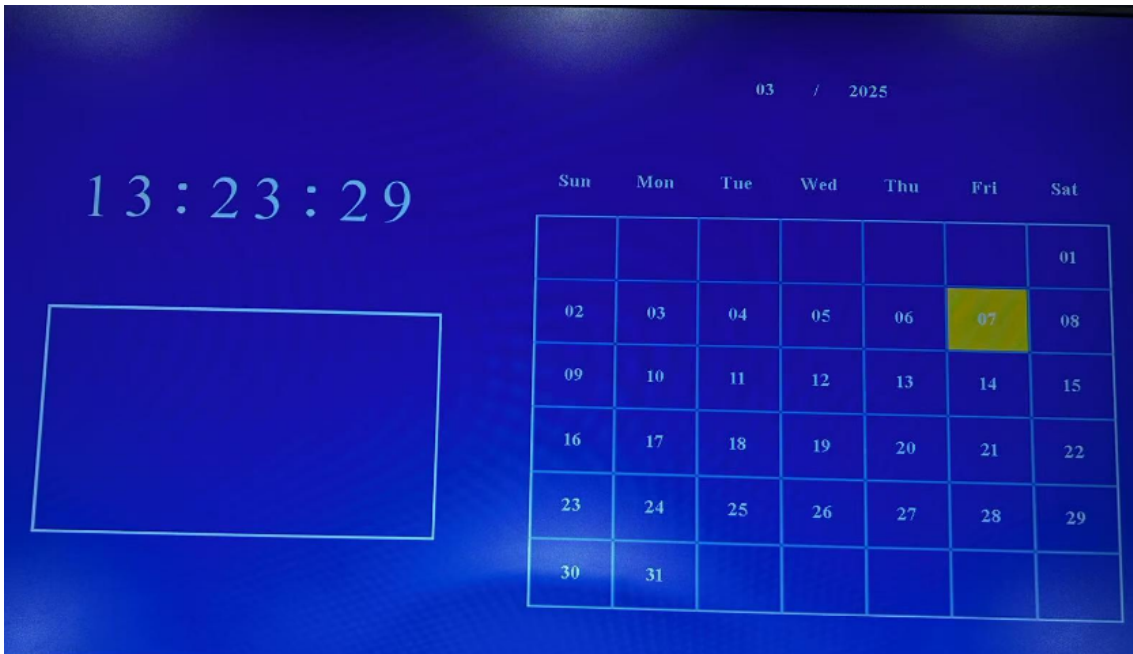

- Setup: show the OSD menu

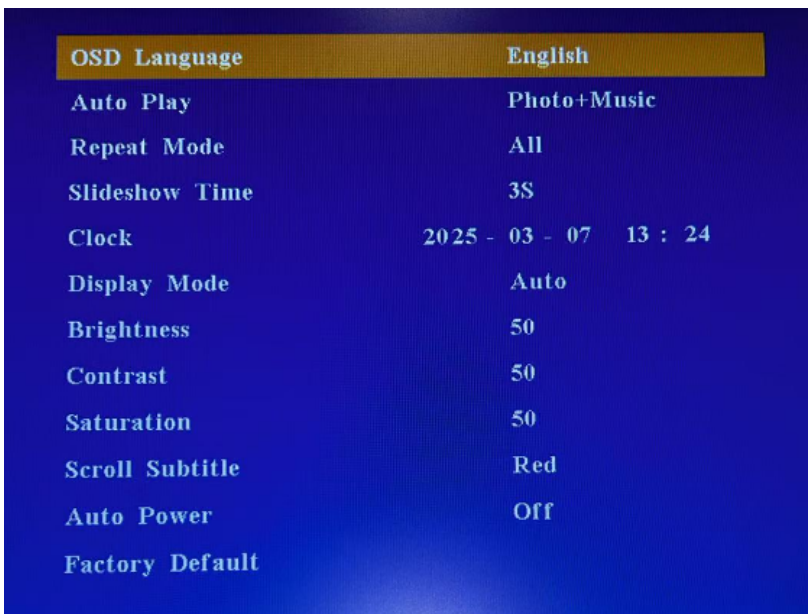 


OSD Language	Product Language Interface
Auto Play	Auto Play Mode: Off / Photo+Music / Photo / Music / Movie
Repeat Mode	Off / Random / One / All

Slideshow Time for Each Photo	3S / 5S /10S / 30S / 60S
Clock	YEAR-MONTH-DATE HOUR:MIN
Display Mode	Auto / Fit / Panorama
Brightness	0~100
Contrast	0~100
Saturation	0~100
Scroll Subtitle	Off / Red / Blue / Green / Black / White
Auto Power	Auto Power On or Off Settings



 
When running the playback, click Calendar to show the OSD menu, which can control it by using Pause / Previous Track / Next Track / Stop / Music / Playlist / Details / Rotate Left / Rotate Right / Zoom In / Zoom Out

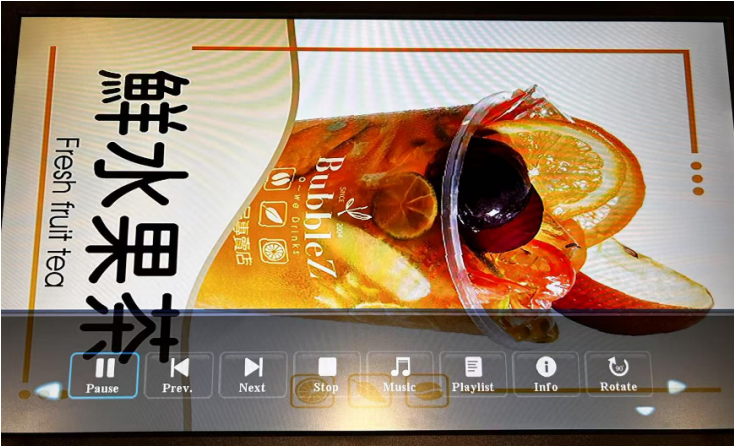

Note: Rotate and Zoom functions are only for preview, when start playing the playback, it will not save the settings.



 When playing the playback, click Exit button to open the file directory.

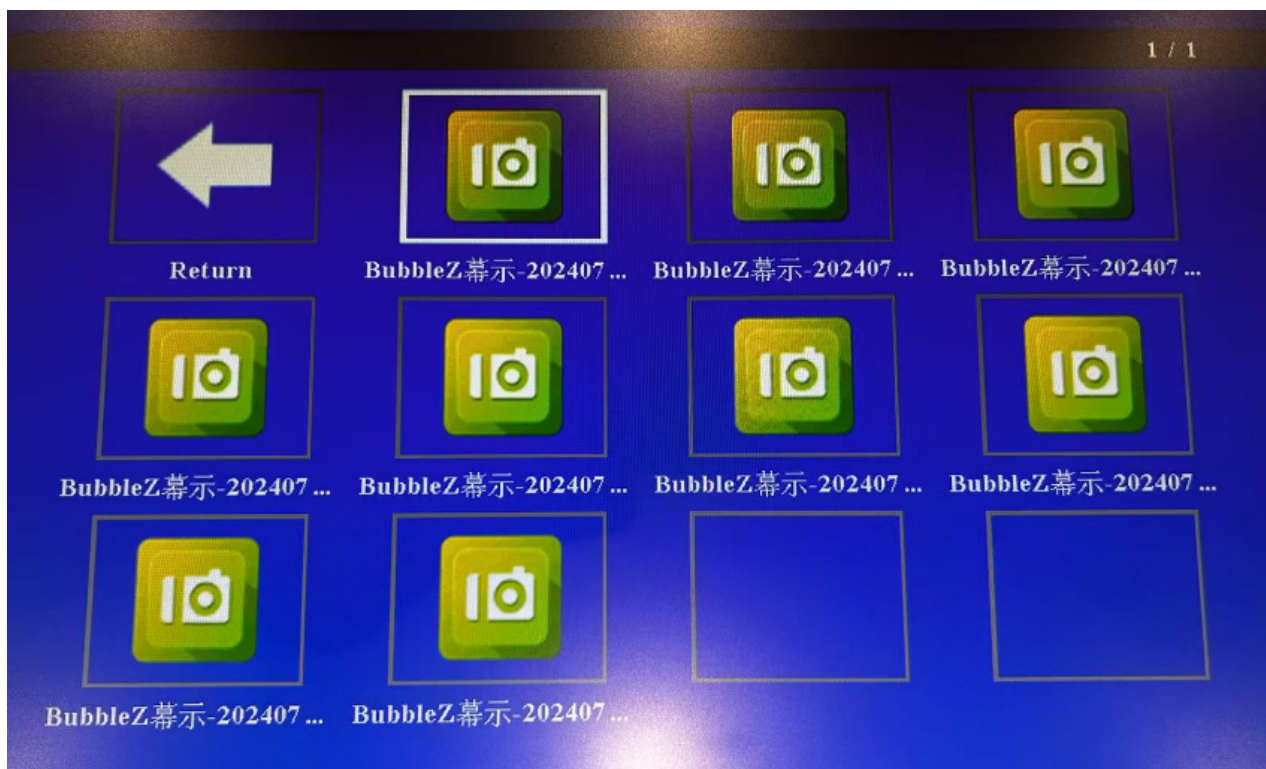


Note: choose any file and press Enter button to exit file directory

About Auto Power On & Off

Press [Setup] button on the remote controller to enter OSD menu, then choose [Auto Power] and turn it on.

 Maximum 3 time slots can be saved (Time1~Time3)

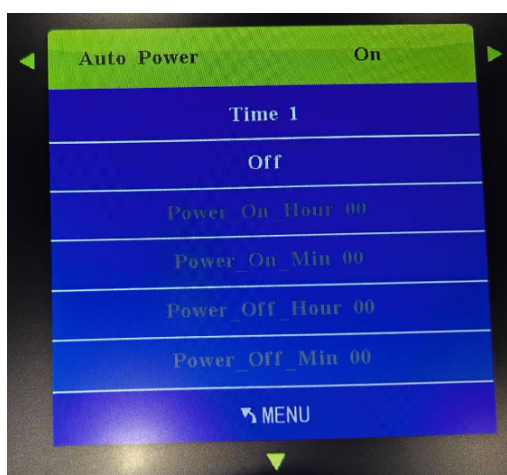

Note: before using Auto power function, please make sure the date and time in [Clock] is correct

 
About displaying photo playback in vertical


We suggest users use Windows built-in software like Paint app to design and edit photo, but if you are a professional designer, you may use Adobe Photoshop or other software to edit it.

In this showcase, we are using Paint app.



Video Tutorial: https://youtu.be/KngTX2lr6f0?si=abjpFblC0-jh_G8T

Step 1. Open Paint app and insert the image

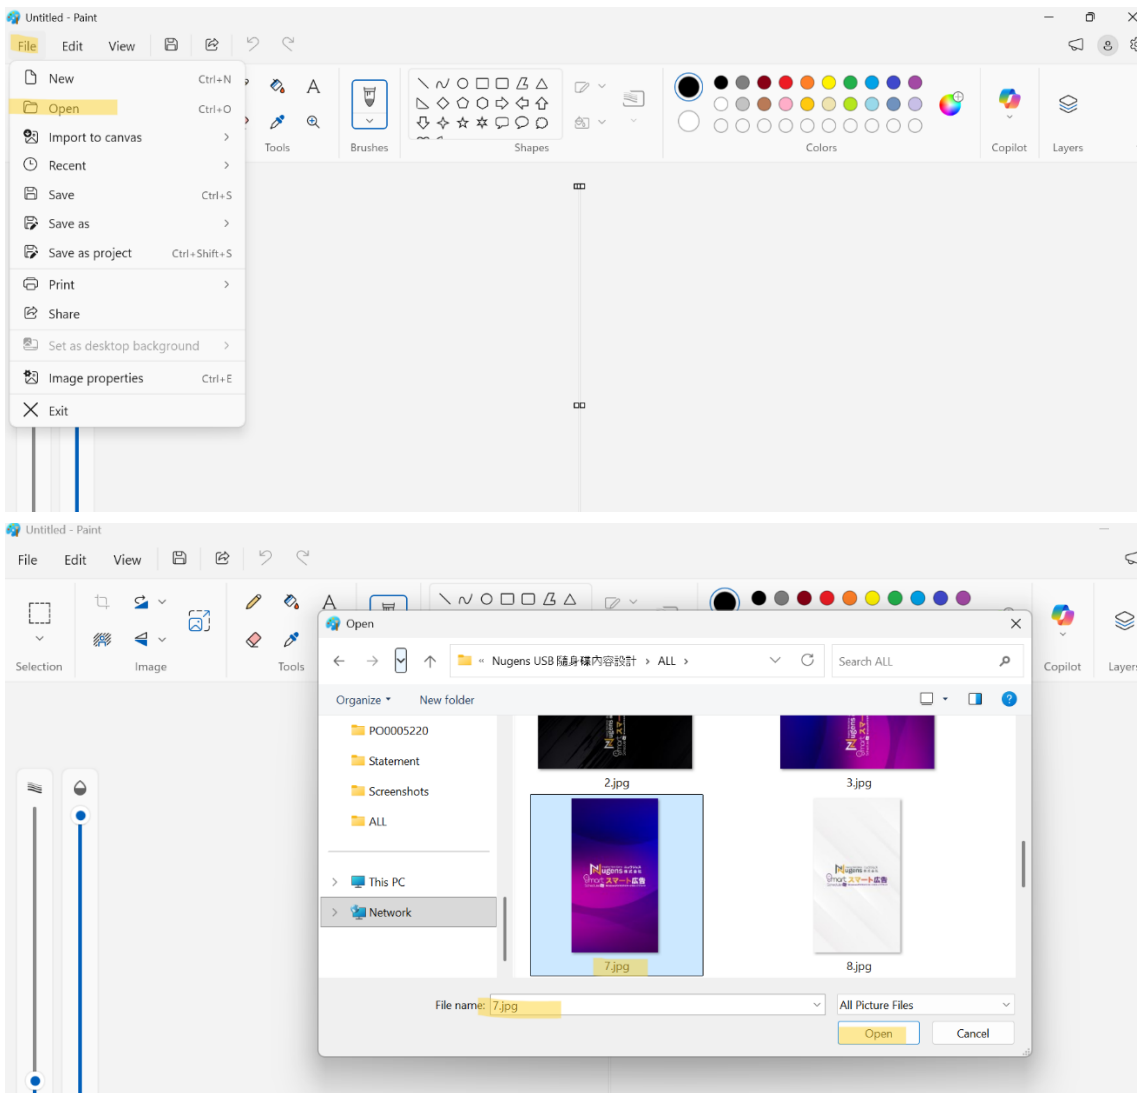

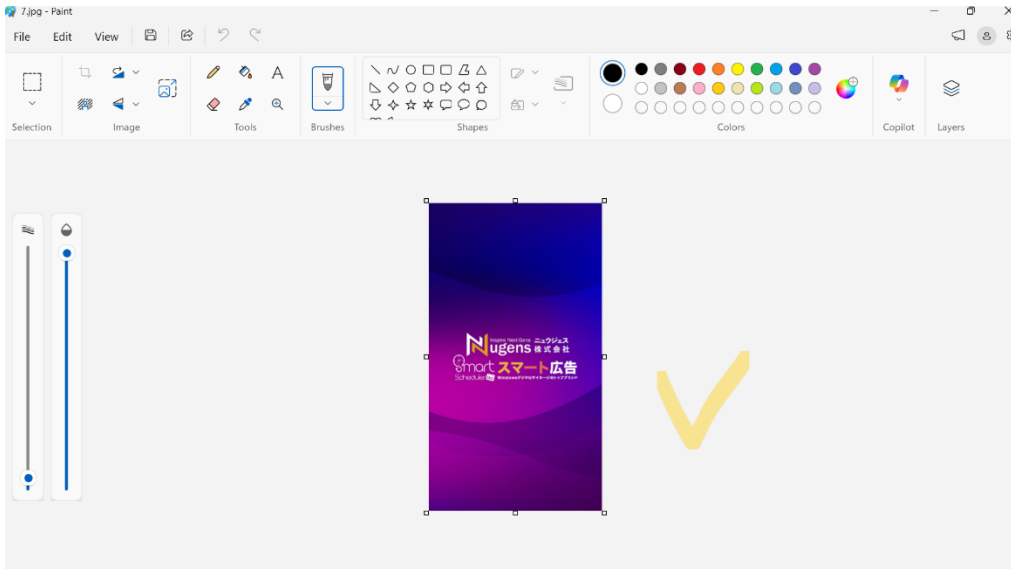

Step 2. Choose Canva and select the Rotate 90 degrees function, for full display size, please use (W)1920px * (H)540px, after done editing, save the image to a USB drive, so it will display vertical in the device.

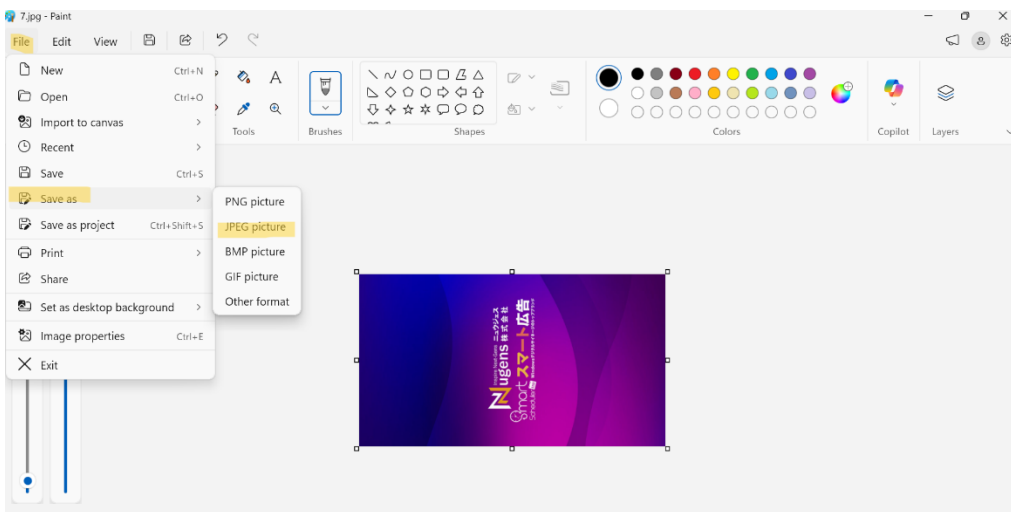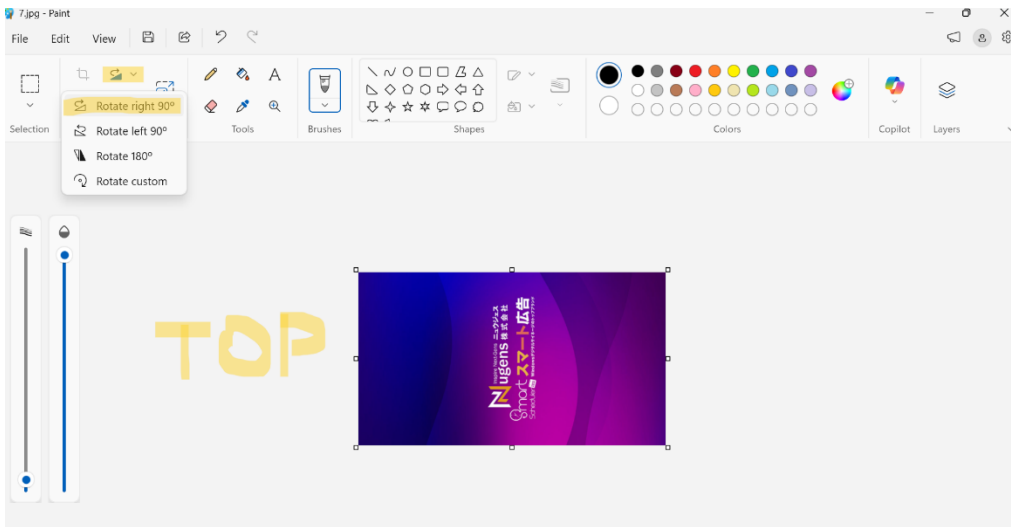


About displaying video playback in vertical

We suggest users use Windows built-in software like MOVIE MAKER to edit the video, but if you are a professional editor, you may use Adobe Premiere Pro, Sony VEGAS or other software to edit it.

In this showcase, we are using MOVIE MAKER.

Download Link: <https://apps.microsoft.com/detail/9MVFQ4LMZ6C9?hl=en-us&gl=TW&ocid=pdpshare>

Step 1. Open Movie Maker and select rotate video

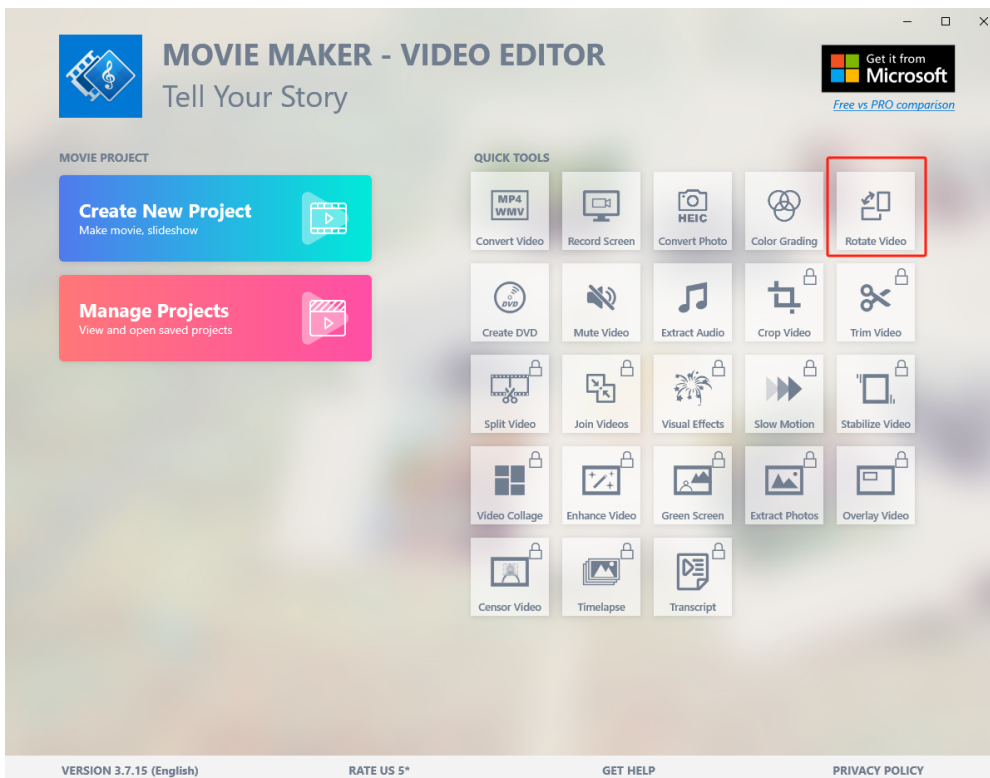

Step 2. Select Rotate left and save video, after done editing save the video to USB drive and it will shows vertical playback correctly.

