

Nugens VX300

 
Bluetooth 5 / Wireless USB / Daisy Chain Tri-Mode Speakerphone

User Manual

Model : VX300




What's Included?

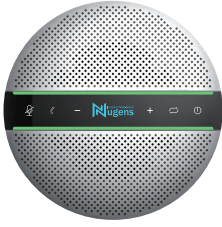

Introduction

 VX300 is a Smart Wireless Conference Speakerphone. This product can connect with PC, tablet and smartphone via Bluetooth or USB cable. And the speakerphone is a 360° omnidirectional microphone with high quality speaker, it can receive voice all round in a long distance. It is small and portable, convenient for both fixed and mobile office.

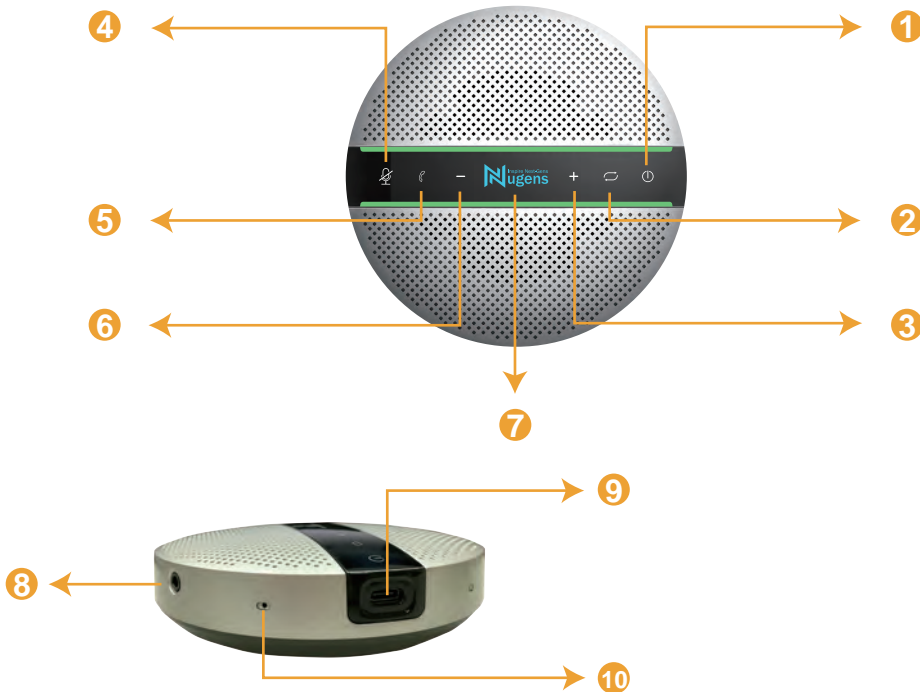


- ① Power Button ② Bluetooth Pairing Mode ③ Volume Up ④ Microphone Mute
- ⑤ Answer Call / End Call / Decline Call ⑥ Volume Down ⑦ Nugens Indicator ⑧ Daisy Chain Port
- ⑨ Type C (Recharge / Connecting to PC) ⑩ Microphone

Indicator Status

Position	Color	Status
Light Bars	Green	Calling/Volume +/Volume -
Light Bars	White	Battery Level
Light Bars	Red	Mute
Light Bars	Flashing Orange	Battery Low
Nugens Indicator	Purple	In Working Mode
Nugens Indicator	Blue	Bluetooth Connected
Nugens Indicator	Flashing Blue	Bluetooth Pairing
Nugens Indicator	Red	Battery Charging

How to Power On / Off?

 Press the power button and hold on 3 secs, the Nugens indicator LED will light up and be purple. Then press the power button and hold on 3 secs again, the device will power off and all LEDs will be off.

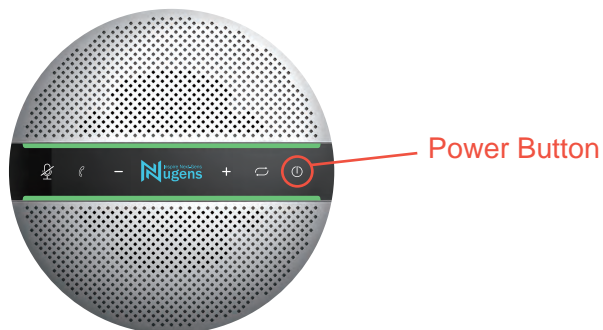

How to Recharge?

Please insert the provided Type-C USB cable to the Type-C USB port of VX300. Then connect the USB (Type A) with the PC's USB port or 5V USB power adapter. When the VX300 is charging, the Nugens indicator LED will be red, the LED will be off when it is fully charged.



* The 5V USB power adapter is not included.

* Only UL certified ITE power supply can be used.

The minimum required of electrical rated output is 5V DC, 1A current.

How to Connect?

1. Connect with PC

- Please use the provided USB cable to connect VX300 with the target PC.
- The device will start automatically, the power indicator LED will light up and you can use it through the USB mode.
- Please set the Echo Cancelling Speakerphone VX300 as the default output and input audio device.



 
2. Connect to smartphone/PC with Bluetooth

- Press the power button and hold on 3s to power on the device, the Nugens indicator LED will light up and be purple, then press the Bluetooth pairing button and hold on 3s, the Nugens indicator LED will be blue and flashing, VX300 is in the Bluetooth pairing mode now, then open the Bluetooth Setting in your smartphone or PC, search for the device "VX300", and select Connect, all set!
- If you are using a PC, please set the Speaker (VX300 Stereo) as the default device and set the Headset (VX300 Hand-Free AG Audio) as the default communication device in playback, set the Headphone Microphone (VX300 Hand-Free AG Audio) as the default communication device in recording, make sure to choose set as default device to another device. Don't choose the same device as the communications device.
- If a device had connected with VX300 before, press the Bluetooth pairing button and hold on 3s, the Nugens indicator LED will be blue and flashing, your smartphone/PC will take the initiative to connect again. Then the Nugens indicator light will stay on.



3. Connect wirelessly to 2 smartphones and 1 PC with USB cable at the same time

- Press power button and hold on 3s, the logo indicator LED will light up and be purple, use USB cable to connect VX300 with target PC, then press Bluetooth pair mode button and hold on 3s, the logo indicator LED will be blue and flashing, the VX300 is in the Bluetooth pair mode, connect up to 2 smartphones to use.
- Among all connections, 2 Bluetooth and 1 USB, the speaker will sound the audio which is sent to speaker first.

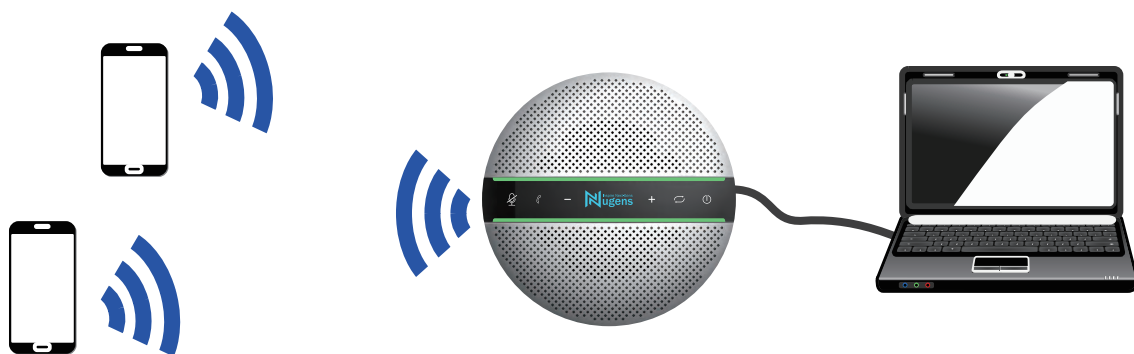





4. Daisy Chain Mode

- Power on 2 VX300s, then connect two devices with the AUX cable.
- Connect one of 2 VX300s to your smartphone in wireless mode or connect to your PC in USB mode. Expand the pickup and playback distance to get more conference space.



Note: When you use it in daisy chain mode, your phone or PC only needs to connect to one of two devices.

How to Operate?

ICON	FUNCTION	OPERATION
	Power ON / OFF	Press and hold this button for 3s to turn it ON or OFF.
	Display Battery Level	Tap this button to view the battery level.
	Mute / Unmute	Tap this button to Mute or Unmute the Mic.
+	Turn Up The Volume	Tap “+” button to increase the volume.
—	Turn Down The Volume	Tap “-” button to decrease the volume.
	Answer Call	Tap this button to answer a call.
	End Call	Tap this button to end a call.
	Reject Call	Press and hold this button for 3s to reject a call.
	Connect New Wireless Device	Press and hold this button for 3s to pair a new device.
	Disconnect With Trusted Wireless Device	Press and hold this button for 3s to reconnect / disconnect with paired wireless device.

Product Specification

VX300	SPECIFICATION
Microphones	6pcs, Omni-Directional
Speaker	3W, Dynamic, 40mm
Wireless range	Up to 10m, Class 2
Wireless Version	5.0, Compatible with 4.2/4.1/4.0/3.0/2.1
Paired Devices	Up to 8 Trusted Devices
Battery Life	Up to 18 Hours
Working Temperature	5°C to 40°C
Storage Temperature	-5°C to 60°C
Wireless Audio Bandwidth	A2DP, Wide Band
Connectivity	USB 2.0 and Wireless Connection
Type-C Port	Charging and Data Connection
Daisy Chain Port	Daisy Chain Mode
Dimensions	130mm (D) x 38.2mm (H)
Weight	280g

Warning:

Only could be used in areas below 2000 meters sea level.

Only applicable to non-tropical climate conditions.

Trouble Shooting

Problem or Phenomenon	Possible Reasons	Treatments
Can't power on	Low battery	Charge through adapter
No Sound	1. Host system audio setting doesn't select the right output device. 2. The volume is very low.	1. Selecting the correct output audio source. 2. Turn up the speaker volume.
USB doesn't work	Doesn't use the right USB cable.	Please use the original USB cable in the package box.
Can't be charged	Adapter issue or battery is full.	Change a new adapter. Tap the power button to check the battery level.
Can't connect with wireless	The Wireless driver of host device doesn't support audio protocol.	Update the latest wireless driver of your host device.

