



USB Digital Signage Display

User Manual

Applicable Models

NC-A24D-29D,32D,43D,55D,65D,75D,32DG,43DG,55DG,43DH,55DH,65DH

Ver. 2026/09



Specifications

System	
RAM	2G
ROM	32G
GPU	Mali-G31 GPU
Language	Multi-language
Audio	MP3 、WMA 、WAV 、APE 、FLAC 、AAC 、OGG 、M4A 、3GPP
Video	H.265 、H.264 、VP8 、MAV 、WMV 、AVS 、H.263 、MPEG4
Image	JPG、 BMP、 PNG
Interface	
HDMI	HDMI-IN
USB	USB 2.0 *2 (Plug-and-play for audio and video), support mouse
TF Card	Supports up to 256GB (Plug-and-play for audio and video)
Other	Audio *1
Speaker	Built-in 8Ω5W *2

Remote Controller Introduction

 


#	Button	Function	#	Button	Function
1		Power	13		Menu
2		Mute	14		Enter/Exit Mouse Mode
3		Play	15		Up Arrow Button


4		(No Function)	16		Down Arrow Button
5		(No Function)	17		Left Arrow Button
6		(No Function)	18		Right Arrow Button
7		Switch to HDMI IN 1	19		Confirm
8		Switch to HDMI IN 2	20		Tab
9		(No Function)	21		Back
10		(No Function)	22		Number 0-9
11		Volume Up	23		Button for “.”
12		Volume Down	24		Delete

OSD Menu


Use the remote control and press the  button to enter the OSD menu.

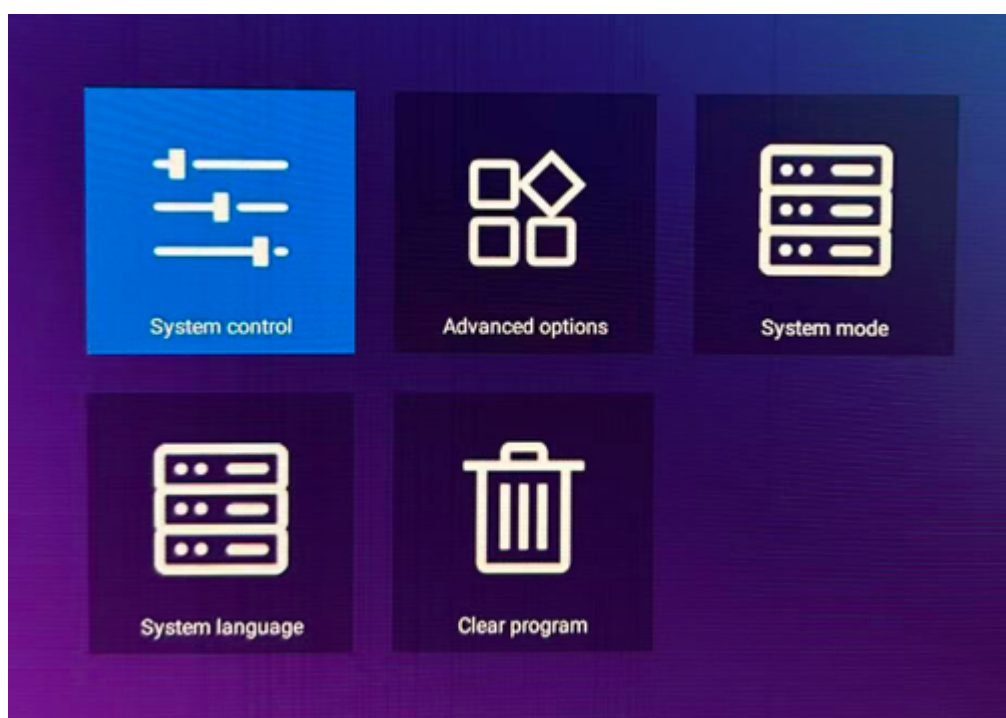


 
A. System Control

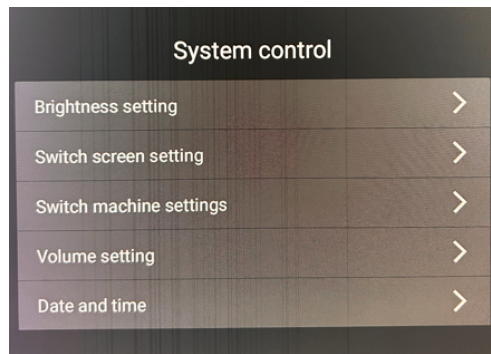



(1) Brightness settings: The default setting applies a constant brightness level at all times.

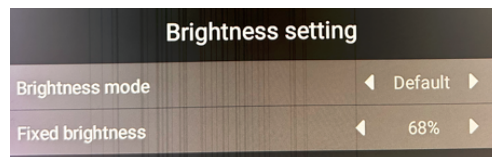


It also supports custom brightness settings for various time periods.

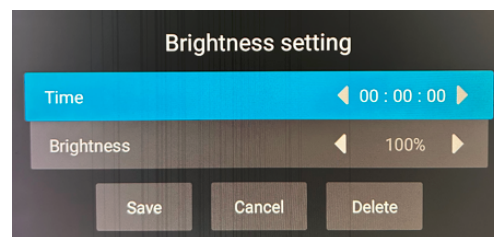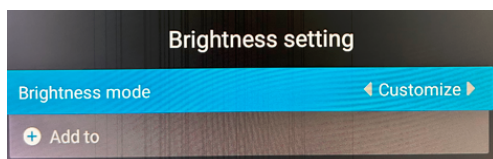


(2) Switch screen settings: Screen power schedule supports multiple customizable on/off time settings.

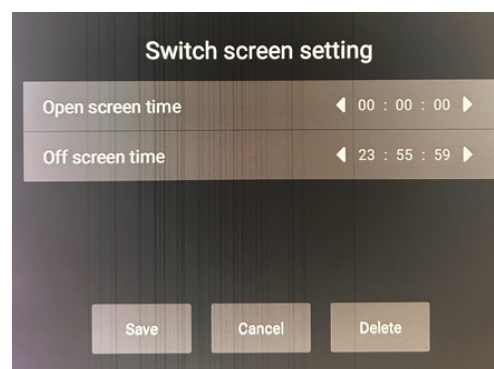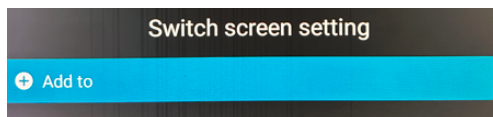


- (3) Switch machine settings: Power On/Off Scheduling allows multiple custom on/off time settings with specific weekdays or dates.

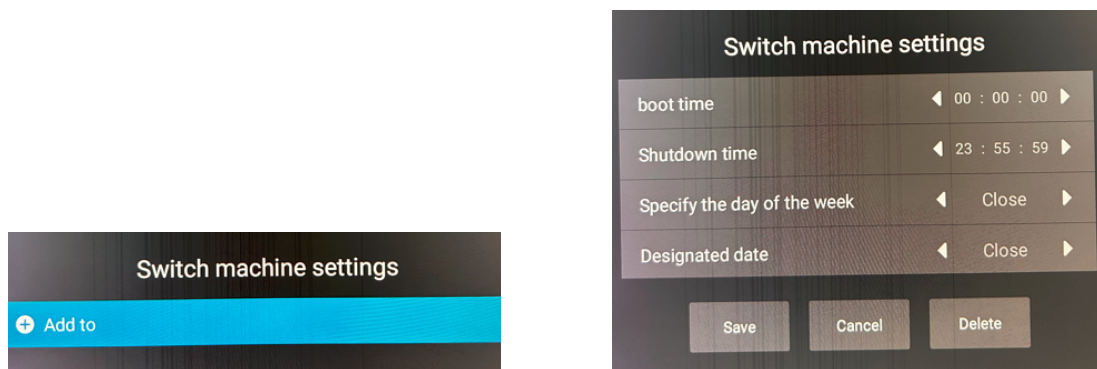


- (4) Volume setting: by default, the same fixed volume level is used for all time periods.

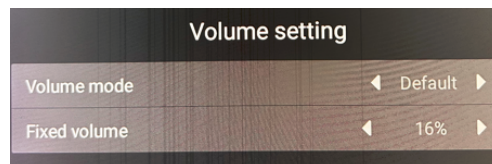


Alternatively, you can customize different volume levels for multiple time periods.

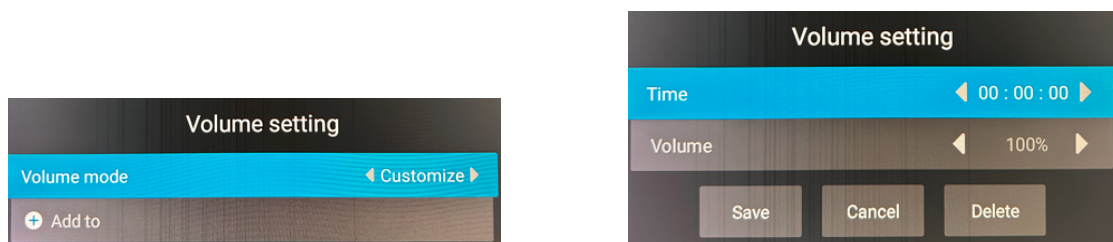

- (5) Time settings: Date & Time to set the local date and time.

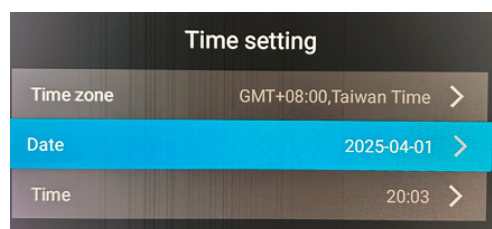


B. Advanced Options

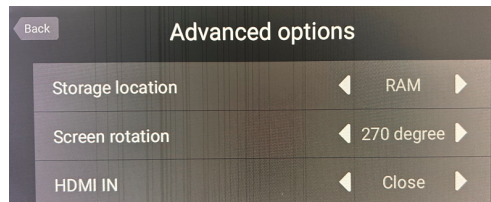


- (1) Storage Location: not in use
- (2) Screen Rotation: adjust screen orientation based on installation direction
- (3) HDMI IN: sets HDMI as the preferred input source; if no HDMI signal is detected, content from USB will be played instead

C. System Mode

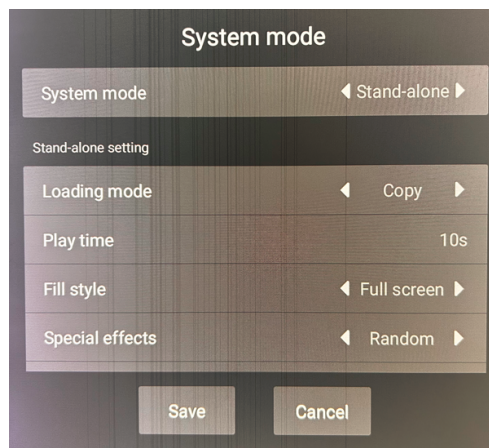

- (1) Stand-alone: Supports USB drives or TF cards. Copy or Extended Playback.
 - Copy: Files from the USB or TF card are copied to the device. Playback will continue even after the USB or TF card is removed. When updated content is detected on the USB or TF card, it will automatically be copied to the device again.
Note: With this option, you will need to re-plug the USB device after each content update or any device setting changes for the updates to take effect.
 - Expand: Content is played directly from the USB or TF card. Playback will stop once the device is removed.
Note: With this option, you do not need to re-plug the USB device after updating content or changing settings.
- (2) Play time: Playback Duration, sets how long each image from USB or TF media is displayed (in seconds).
- (3) Fill Style, Display Mode, supports full-screen display or scaling.

(4) Special effect: Transition Effects, various transition effects are available for customization.

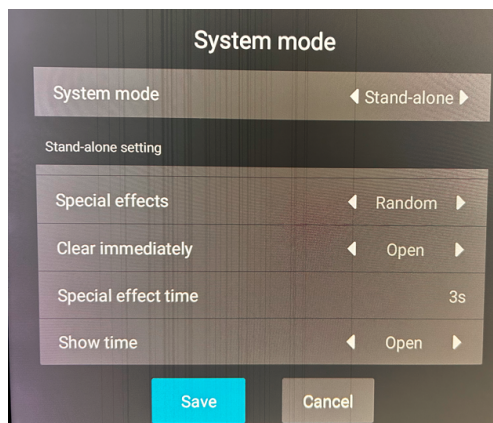

(5) Clear Immediately: Instant Screen Clear, when this option is enabled, the current media will be cleared immediately before switching to the next media.

If this option is disabled, the next media will overlay the current one without clearing it first.


(6) Special effect time: Effect Duration, sets the duration of the transition effect.

(7) Show time: Clock Display, Turn on or off the on-screen clock.

D. System Language: Supports Traditional Chinese, Simplified Chinese, English, Japanese, and Korean.

E. Clear program: Deletes all media files stored locally on the device.

Exit Playback / Return to OSD Menu

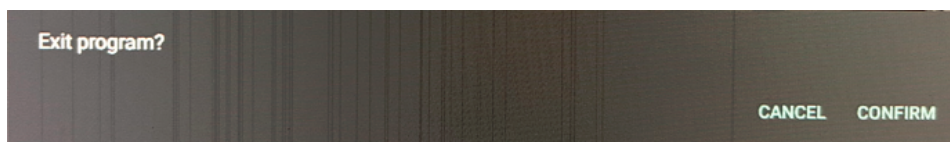

- During playback, pressing the  button on the remote will bring up an exit confirmation prompt. To continue playing, please select "Cancel".
- If "Confirm" is selected, a password input screen will appear. This is used for factory maintenance purposes. Simply press the  button to exit and return to the playback screen.
- If you want to go to the OSD Menu, press the  button.