



Wireless Charging Stylus for iPad

Quick Installation Guide



SL-B1

▼ **Disclaimer**

- The specifications and information contained in this manual are for reference only, and the content and information are subject to change without prior notice.
- If other product or company names appear in the content of the manual, they are only used to describe the product description, and there is no intention of infringement.
- Nugens reserves the right to update this disclaimer at any time and shall not be liable for any damage or compensation caused by issues beyond our control or improper use.

▼ **Warnings and Precautions**

- The installation and use of this product must strictly abide by the electrical safety regulations of the country and the region of use.
- The main body of this product and the remote control have built-in batteries, please recycle, or scrap them according to national regulations.
- This product contains small parts. Please do not place it in areas where children can easily access it.

▼ **Instructions**

- After taking out the product, install it according to the installation manual.
- Please keep it away from heat sources and humid environments.
- Product performance may vary in different environments.

▼ **Safety Instructions**

Before using this product, please read and follow the instructions below to ensure safe operation.


- Please use the charging cable provided by the original factory to avoid damage to the product.
- Do not attempt to repair or disassemble any components of this

product by yourself, otherwise it may cause product damage or personal injury, and will also invalidate the warranty of this product.

- Before cleaning this product, unplug the charging cable and turn off the power first.

Overview

[Appearance]

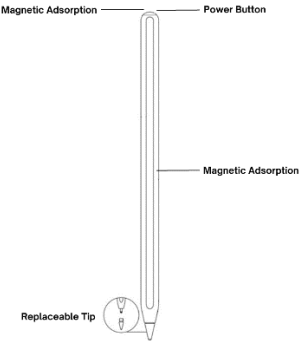

[Specification]

Type	Active, Bluetooth Pairing
Bluetooth Name	Nugens Pencil
Bluetooth Version	5.0
Pen Size	L 166 x Φ 9.0mm
Tip Size	Φ 1.5mm
Pen Weight	13.5g
Materials	Pen: Aluminum Alloy / Pen Tip: POM

Charging	Magnetic Wireless Charging
Power (Input)	4.3V
Battery	Polymer Lithium-ion Battery 125mAh
Color	White
Power Button	Touch Button
Indicator LED Light	YES
Indicator Status	Power On: blue light is always on Charging: red light flashes Full Charging: the green light will be on for 30 secs then it will turn off
Magnetic Charging	iPad Mini 6 8.3" (A2567/A2568/A2569) ----- iPad Air 4 10.9" (A2316/A2324/A2325/A2072) iPad Air 5 10.9" (A2588/A2589/A2591) ----- iPad Pro 11" (A1980/A2013/A1934/A1979/ A2228/A2068/A2030/A2231) iPad Pro 3 12.9" (A1876/A2014/A1895/A1983) iPad Pro 3 11" (A2377/A2459/A2301/A2460) iPad Pro 4 12.9" (A2229/A2069/A2232/A2233) iPad Pro 4 11" (A2759/A2435/A2761/A2762) iPad Pro 5 12.9" (A2378/A2461/A2379/A2462) iPad Pro 6 12.9" (A2436/A2764/A2437/A2766)
Charging Time	2 - 4 hours
Working Time	At least 11 hours
Standby Mode	After 5 mins
Touch Button Function	Click it once: Return to Home Screen Long press for 3 secs: Power ON or Power OFF
Compatible Devices	iPad 6 9.7" (A1893/A1954) iPad 7 10.2" (A2197/A2198/A2200) iPad 8 10.2" (A2270/A2428/A2429/A2430) iPad 9 10.2"

	(A2602/A2604/A2603/A2605) iPad 10 10.9" (A2696/A2757/A2777) ----- iPad Mini 5 7.9" (A2133/A2124/A2126/A2125) iPad Mini 6 8.3" (A2567/A2568/A2569) ----- iPad Air 3 10.5" (A2152/A2123/A2153/A2154) iPad Air 4 10.9" (A2316/A2324/A2325/A2072) iPad Air 5 10.9" (A2588/A2589/A2591) ----- iPad Pro 11" (A1980/A2013/A1934/A1979/ A2228/A2068/A2030/A2231) iPad Pro 3 12.9" (A1876/A2014/A1895/A1983) iPad Pro 3 11" (A2377/A2459/A2301/A2460) iPad Pro 4 12.9" (A2229/A2069/A2232/A2233) iPad Pro4 11" (A2759/A2435/A2761/A2762) iPad Pro 5 12.9" (A2378/A2461/A2379/A2462) iPad Pro 6 12.9" (A2436/A2764/A2437/A2766)
Package Contents	SL-B1 x 1 Extra Tip x 2 Manual x 1

Instructions

Thank you for purchasing the SL-B1 Wireless Charging Stylus for iPad.

- Before using the stylus, please make sure that there is sufficient power.
- Please remove the paired stylus from the device you want to use before using this product.
- This product required Bluetooth pairing before use.
- Please use a compatible device for Bluetooth pairing and charging. Please refer to the product specification sheet for compatible devices.

1. Stylus On: Hold the touch button for 3 secs to turn on the stylus, and the blue light will stay on continuously, indicating

that it can be used normally.

Stylus Off: Hold the touch button for 3 secs, and the indicator light will go off, indicating that the power has been turned off.




Note: In the power-on state, it will auto turn off after 5 minutes of standby.

2. After turning on the iPad's Bluetooth, "Nugens Pencil" appears on the iPad. After the pairing is completed, then the product can be used.



Note: When the stylus is in use and done Bluetooth pairing, the indicator light is always in blue.

3. When connected to Bluetooth, place the magnetic surface of the stylus on the iPad to charge it magnetically.

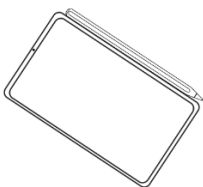

Note 1: When charging, the indicator light will flash in red. When the charging is done, the indicator light will turn green color for 30 secs, then the light will go off.


Note 2: After the Bluetooth pairing is completed, the iPad will display the battery percentage.

4. **Charging holder:** Connect the Type-C charging cable to the charging holder, and the red light on the charging holder is always on, then you may put the stylus in.

When charging is in progress, the green light on the charging holder flashes and the red light on the stylus flashes too.

When the charging is completed, the green light of the charging holder is always on, and the green light of the stylus is on for 30 secs, and then the

light goes out.

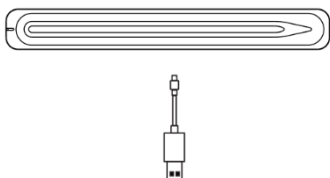

5. To replace the tip, turn the detachable tip counterclockwise out and install the replacement tip clockwise.



Note: Please use the replacement tip provided by Nugens to avoid leading to subsequent adverse effects.

Frequently Asked Questions



The stylus cannot power on.

1. Check if the battery is too low or depleted.
2. Verify if the power-on operation is being performed correctly.



The stylus is unresponsive.

1. Verify if the iPad is compatible with the stylus.
2. Please use the original manufacturer's stylus tip.



There is discontinuity in calligraphy or painting.

1. Check if the stylus tip is securely fastened.
2. Verify if the stylus tip is worn out and needs to be replaced with a new

限用物質含有情況標示聲明書

Declaration of the Presence Contention of the Restricted Substance Marking

設備名稱 Equipment name : Nugen iPad 蓝牙磁吸充電擴充器

型號 (型式) Type designation (Type) : SL-01

單元/材料	限用物質及其化學品號					
	Restricted substances and its chemical symbols					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 Hexavalent chromium (Cr-6)	多溴聯苯 Poly brominated Biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers(PBDE)
液體件(零件)	○	○	○	○	○	○
單元	○	○	○	○	○	○
電池板	○	○	○	○	○	○
其他配件(充電 線)	○	○	○	○	○	○

附註 1: "超出 0.1 wt %" 及 "超出 0.01 wt %" 係指限用物質之百分比含量超出百分之十含量基準法。

Note 1: "Exceeding 0.1 wt %" and "exceeding 0.01 wt %" indicates that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

附註 2: "○" 係指該項限用物質之百分比含量未超出百分之十含量基準法。

Note 2: "○" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

附註 3: "—" 係指該項限用物質為禁列項目。

Note 3: The "—" indicates that the restricted substance corresponds to the ban/forbidden.

備註1: "超出 0.1 wt %" 及 "超出 0.01 wt %" 係指限用物質之百分比含量超出百分比含量標示法。

Note 1 : "Exceeding 0.1 wt %" and "exceeding 0.01 wt %" indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備註2: "○" 係指該項限用物質之百分比含量未超出百分比含量標示法。

Note 2 : "○" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備註3: "—" 係指該項限用物質為排除項目。

Note 3 : The "—" indicates that the restricted substance corresponds to the exemption.

茲切結保證所提供之商品限用物質含有情況標示內容係能執行測試作業或經過
當之品質管理措施，且備置前述相關文件，確認正確無誤後提供貴局。並同意
配合貴局執行後市場管理作業所需，依商品檢驗法第49條之規定，於限期28個
工作天內提供相關證明文件以供審查。

I hereby ensure that "the presence conditions of the restricted substance" provided above have been
provided by testing or appropriate quality control measures, and make sure the relevant documents
provided are correct and ready. Also, I agree to cooperate with BSM, as the Article 49 of the
Commodity Inspection Act stipulates, to provide the relevant documents, if needed, for verification
within 28 working days when BSM carries out the market surveillance activities.



Official website:

<https://www.nugenstech.com>

Email: sales@nugenstech.com



保固卡 Warranty Card

詳細保固條款請參閱官網，本公司保有調整之權利。
詳細保固條款請參閱官網，本公司保有調整之權利。

Nugens reserves the right to change or to add at any time the warranty options available to you, please refer to Nugens official website.

詳細保固項目は公式サイトをご覧ください。当社は項目を調整する権利を持っています。

www.nugenstech.com



感謝您購買NUGENS產品，請立即註冊始享有完整保固服務。

保固註冊序號如下或於機身SN(部分產品貼於外包裝)

Thank you for purchasing NUGENS products, please register now to enjoy full warranty service.

The warranty registration serial number is as follows or located on the device's S/N label. (Some S/N are attached to the outer packaging)

NUGENS 製品をお買い上げいただきありがとうございます。

完全な保証サービスを受けるには、今すぐ登録してください。

保証登録シリアルナンバーは下記または本体シリアルナンバーラベル
(一部商品は外装に貼付)