

Capacitive Magnetic Stylus for iPad Quick Installation Guide



Model: SL-C2

▼ Disclaimer

The specifications and information contained in this manual are for reference only, and the content and information are subject to change without prior notice.

If other product or company names appear in the content of the manual, they are only used to describe the product description, and there is no intention of infringement.

Nugens reserves the right to update this disclaimer at any time and shall not be liable for any damage or compensation caused by issues beyond our control or improper use.

▼ Warnings and Precautions

The installation and use of this product must strictly abide by the electrical safety regulations of the country and the region of use.

The main body of this product and the remote control have built-in batteries, please recycle, or scrap them according to national regulations.

This product contains small parts. Please do not place it in areas where children can easily access it.

▼ Instructions

After taking out the product, install it according to the installation manual.

Please keep it away from heat sources and humid environments.

Product performance may vary in different environments.


▼ Safety Instructions

Before using this product, please read and follow the instructions below to ensure safe operation.

- Please use the charging cable provided by the original factory to avoid damage to the product.
- Do not use the charging cable if it is damaged to avoid any potential hazards.
- Do not attempt to repair or disassemble any components of this product by yourself, otherwise it may cause product damage or personal injury, and will also invalidate the warranty of this product.
- Before cleaning this product, unplug the charging cable and turn off the power first.
- Please use a soft cloth to remove the dust on the lens; do not spray the cleaning fluid directly on the interface of the charging cable, to avoid infiltration and cause electric shock.

Overview

[Appearance]

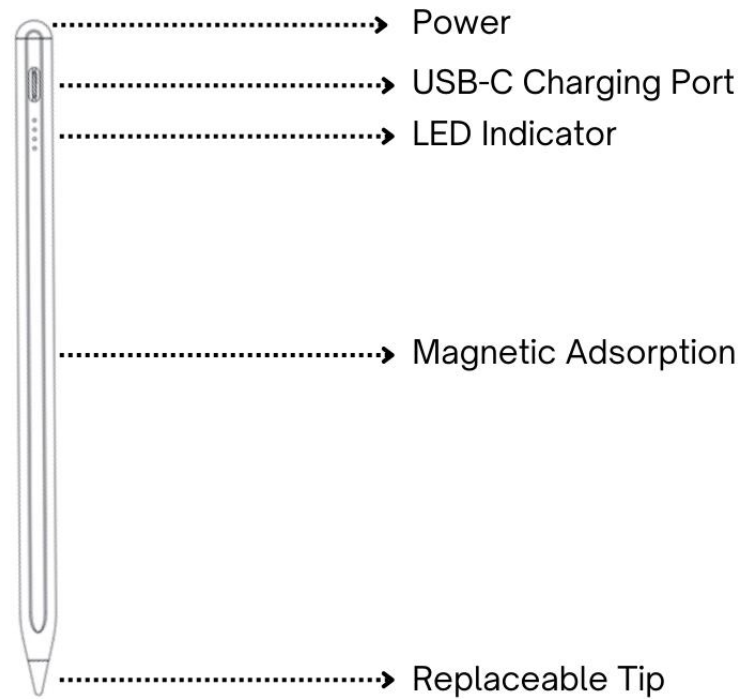

[Specification]


Product	Nugens Capacitive Magnetic Stylus for iPad
Model	SL-C2
Type	Active, No Pairing Required
Pen Size	L 165 x Φ 8.9mm
Pen Tip Size	L 8.9 x Φ 5.0 x Φ 1.7mm
Weight (Pen)	13g
Pen Material	Pen: Aluminum Alloy / Pen Tip: POM
Charging Port	USB-C (with dust plug)
Power (Input)	5V/300mAh
Battery	Polymer Lithium-ion Battery 140mAh
Accuracy	\pm 0.1/ \pm 0.2mm (Center/Edge)
Pen Color	White
Power	Touch Button
Magnetic Adsorption	iPad Pro 11", iPad Pro 12.9", iPad Air 4&5, iPad Mini 6
Charging Time	40 mins
Working Time	10 - 12 hours
Standby Mode	60 mins
LED Indicator for Battery Level	White light one bar represents approximately 1-25%, White light two bars represent approximately 25-50%, White light three bars represent approximately 50-75%, White light four bars represent approximately 75-100%.
Compatible Device(s)	iPad Pro 12.9" (6th gen, 5th gen, 4th gen), iPad Pro 11" (4th gen, 3rd gen, 2nd gen), iPad Air 10.9" (5th gen, 4th gen), iPad Air 10.5" (3rd gen), iPad Mini 7.9" (6th gen, 5th gen), iPad 10.9" (10th gen), iPad 10.2" (9th gen, 8th gen, 7th gen)
Package Contents	SL-C2 x 1, USB-C Cable x 1, Extra Tip x 1, Manual x 1

Instructions

Thank you for purchasing the SL-C2 Capacitive Magnetic Stylus for iPad.


- Before using the stylus, please make sure that there is sufficient power. Please refer to the power indicator light in the specifications table.
- Please remove the paired stylus from the device you want to use before using this product.
- This product is an active capacitive stylus and does not require pairing. It can be used when the power is turned on.
- SL-C2 can support multiple iPads simultaneously.

1. Stylus On: Double-click the touch power switch, and the white light will stay on continuously, indicating that it can be used normally. Stylus Off: Double-click the touch power switch, and the white light will go off, indicating that the power has been turned off.

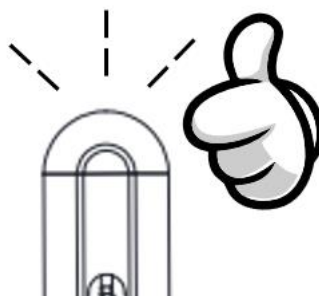


2. Please use the original charging cable to connect to the USB-C port for charging.


Note: The USB-C charging port is equipped with a dust plug. Please remove it before charging.

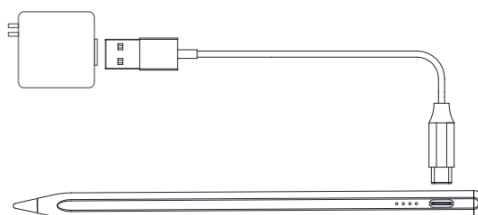


When the power is on, the current battery level will be indicated by a continuous white light.

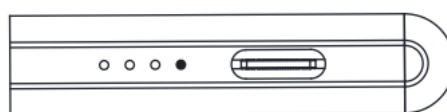

When charging, the white light flashes

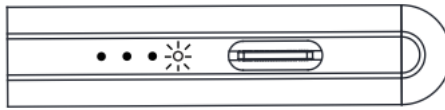


When charging is complete, the white lights are all on

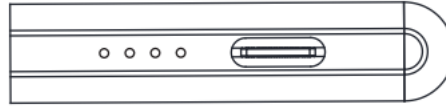

3. For Magnetic Absorption, please place the magnetic surface in contact with the device being used.

Note 1: This feature is only applicable to supported devices. Please refer to the specifications table for supported devices.

Note 2: This product does not have magnetic charging functionality.

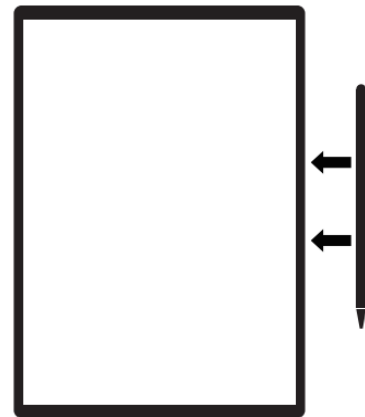

4. To replace the pen tip, turn the detachable pen tip counterclockwise to remove it, and turn the replacement pen tip clockwise to lock it in place.

Note: Please use the replacement pen tips provided by the original manufacturer to avoid affecting the operation.



Frequently Asked Questions



The stylus is unresponsive.

- Ensure that the device being used, and the stylus are mutually compatible models.
- Check if the battery level is too low or depleted.
- Make sure to remove any previously paired stylus.
- Please use original manufacturer pen tips.



The writing and drawing may be intermittent or unresponsive.

- Check if the pen tip is worn out and needs to be replaced with a new one.
- Clean the surface of the iPad screen with a clean and soft cloth and restart the iPad.

[Declaration of the Presence Condition of the Restricted Substances Marking]

限用物質含有情況標示聲明書

Declaration of the Presence Condition of the Restricted Substances Marking

設備名稱 Equipment name : Nugens iPad 電容式磁吸觸控筆						
型號 (型式) Type designation (Type) : SL-C2						
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁺⁶)	多溴聯苯 Poly brominated Biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers(PBDE)
機構件(筆身)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
筆尖	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
電路板	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
其他配件(充電線)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
<p>備考 1. “超出 0.1 wt %” 及 “超出 0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。 Note 1 : “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.</p> <p>備考 2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2 : “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.</p> <p>備考 3. “—” 係指該項限用物質為排除項目。 Note 3 : The “—” indicates that the restricted substance corresponds to the exemption.</p>						

茲切結保證所提供之商品限用物質含有情況標示內容係經執行測試作業或採適當之品質管理措施，並備置前述相關文件，確認正確無誤後提供貴局。並同意配合貴局執行後市場管理作業所需，依商品檢驗法第49條之規定，於限期28個工作天內提供相關證明文件以供審查。

I hereby ensure that “the presence conditions of the restricted substance” provided above have been proved by testing or appropriate quality control measures, and make sure the relevant documents provided are correct and ready. Also, I agree to cooperate with BSMI, as the Article 49 of the Commodity Inspection Act stipulates, to provide the relevant documents, if needed, for verification within 28 working days when BSMI carries out the market surveillance activities.

[Warranty Card]



保固卡 Warranty Card

詳細保固條款請參閱官網，本公司保有調整之權利。

詳細保固條款請參閱官網，本公司保有調整之權利。

Nugens reserves the right to change or to add at any time the warranty options available to you, please refer to Nugens official website.

詳しい保証項目は公式サイトをご覧ください。当社は項目を調整する権利を持っています。

www.nugenstech.com



感謝您購買NUGENS產品，請立即註冊始享有完整保固服務。

保固註冊序號如下或於機身SN(部分產品貼於外包裝)

Thank you for purchasing NUGENS products, please register now to enjoy full warranty service.

The warranty registration serial number is as follows or located on the device's S/N label. (Some S/N are attached to the outer packaging)

NUGENS 製品をお買い上げいただきありがとうございます。

完全な保証サービスを受けるには、今すぐ登録してください。

保証登録シリアルナンバーは下記または本体シリアルナンバーラベル
(一部商品は外装に貼付)



Official website: <https://www.nugenstech.com>

Email: sales@nugenstech.com